

Replacing the fwd/rev switch.


Start by removing the screws under the handles.




After removing the control panel, you can open it up and remove the screws located on the DRO.



Once you remove the screws flip over the DRO and remove the wires for the switch.

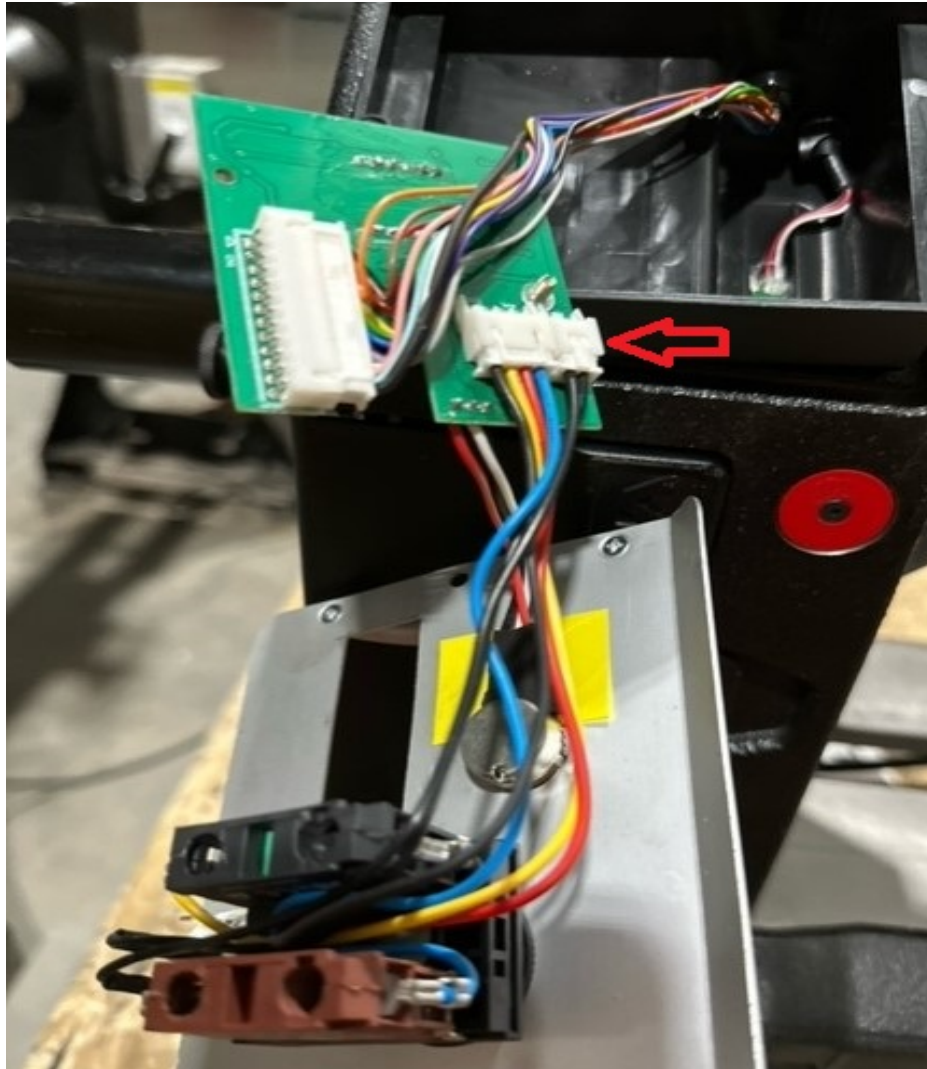

Once you remove the wires you can then remove the switch from the control panel.

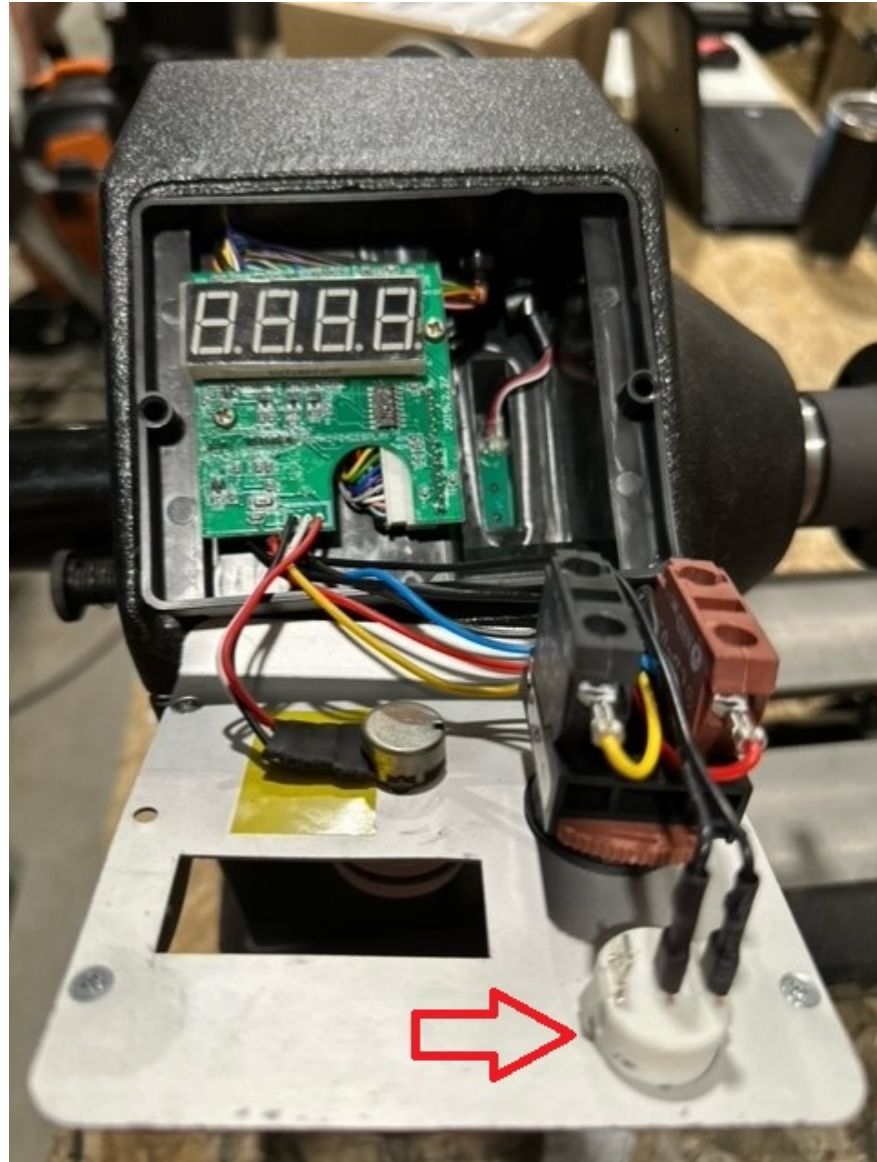

You will need to push on the 2 sides to remove the switch from the panel. You may need to use some pliers to remove. After the wires and switch are removed you can replace it with a new one.